
 


**1**  
**G**  
**E**

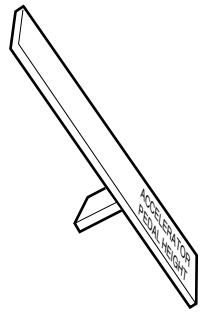


1




2




3

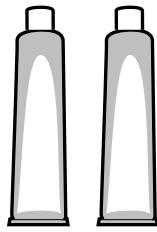

4

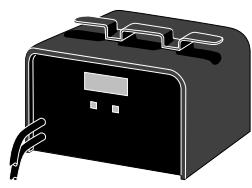


5

 


6



 7




8

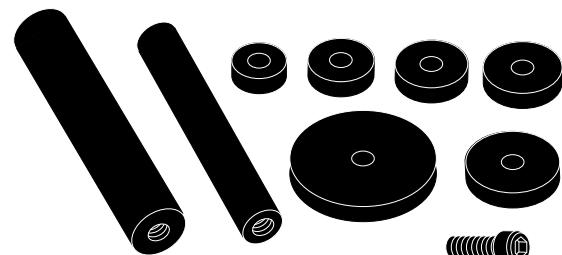


9




10

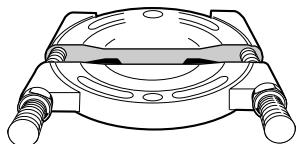


11

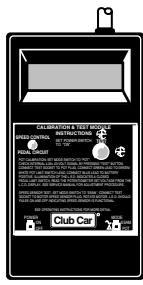

12

 


13

 


14




15

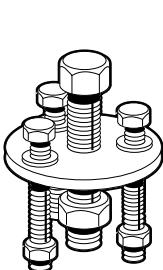

16

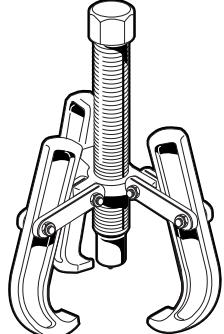


17

 


18



19

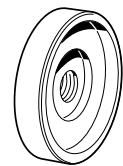


20

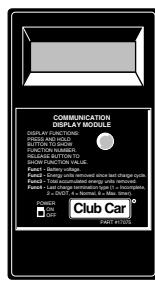


21




22

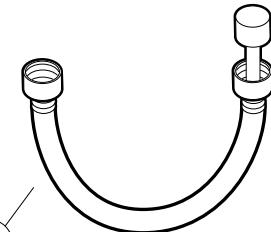


23

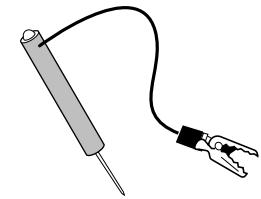

24

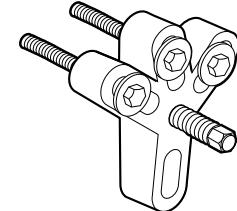

25

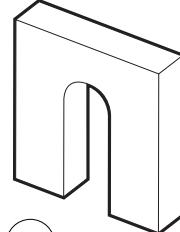

26

# MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	1018710-01	ACCELERATOR PEDAL ADJUSTMENT TOOL .....	1	1
2	1016985	ADHESION PROMOTER - ARMORFLEX® .....	1	1
3	1018132-02	ADHESIVE, GUIDE RING, 3 GRAM TUBE .....		1
4	1017295	ARMORFLEX REPAIR KIT .....	1	1
5	1018319-01	BATTERY DISCHARGE MACHINE, 36/48 VOLT .....		1
6	1014305	BATTERY TERMINAL PROTECTOR SPRAY .....	1	1
7	1011767	BATTERY THERMOMETER .....		1
8	1016417	BEARING AND OIL SEAL REMOVER ASSEMBLY .....	1	1
9	1016416	BEARING DRIVER SET .....	1	1
10	1012811	BEARING PULLER .....	1	1
11	1012812	BEARING PULLER WEDGE ATTACHMENT .....	1	1
12	1018871-01	CALIBRATION TEST MODULE .....		1
13	1018084-01	CAM INSTALLATION TOOL .....	1	
	1014510	CLUTCH TOOL KIT (INCLUDES ITEMS 14 - 20 ) .....	1	
14	1014498	CLUTCH ALIGNMENT TOOL .....	1	
15	1014496	DRIVE CLUTCH PULLER .....	1	
16	1014497	CLUTCH DRIVE HUB PULLER .....	1	
17	1014508	DRIVEN CLUTCH CAM PULLER .....	1	
18	1014507	DRIVEN CLUTCH PULLER PLUG .....	1	
19	1015524	DRIVE CLUTCH HOLDER TOOL ASSEMBLY .....	1	
20	1018091-01	PRESS WELDMENT .....	1	
21	1018318-01	COMMUNICATION DISPLAY MODULE .....		1
22	1016410-02	COMPRESSION GAUGE AND ADAPTER .....	1	
23	1011273	CONTINUITY TESTER .....	1	1
24	1012151	DRY MOLY LUBRICANT .....	1	1
25	1016627	FLY WHEEL PULLER KIT .....	1	
26	1016418	GEAR YOKE .....	1	1
		PLEASE REFER TO THE MAINTENANCE AND SERVICE MANUAL FOR PROPER TOOL APPLICATION.		

1

G

E