



TRAILER HITCH
WILL FIT CLUB CAR® DS®
INSTALLATION INSTRUCTIONS
01-037

INCLUDED:

- TRAILER HITCH
- 2 M8X25 HEX HEAD BOLTS
- 2 M8 FLAT WASHERS
- 2 M8 LOCKING NUTS



Engage Parking Brake and chock wheels.
Place RUN/TOW switch in TOW position.
Remove four factory bolts on the bumper
and retain.



Remove factory bumper.




3
Mount trailer hitch to cross member as shown using supplied hardware. Tighten hardware.



4
Using hardware retained from Step 1, attach bumper. Retained hardware should mount down from bumper through trailer hitch. Tighten hardware.

5
Insert hitch into receiver and secure with pin.

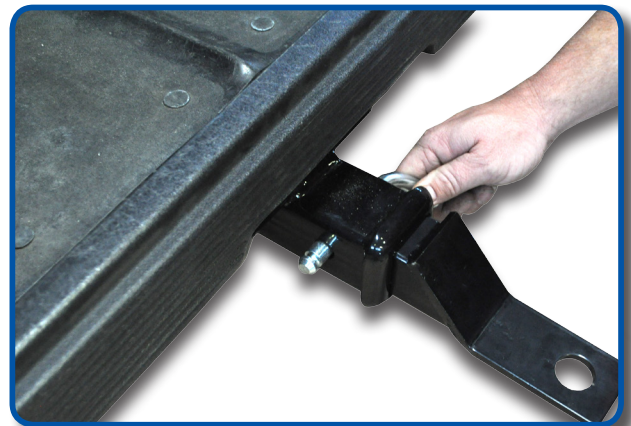

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.